# Mesh Rider Radio GCS Reference Design

## Introduction

In this guide, we detail the design of a Ground Control Station (GCS) using the Doodle Labs Mesh Rider Radio. There are several available form factors in the Mesh Rider Radio family, and we will discuss how the Wearable Mesh Rider Radio or the Embedded/External Mesh Rider Radios can be used in a GCS.

Figures 1 and 2 shows examples of the applications which have been demonstrated using Doodle Labs Mesh Rider Radios.



Operating Conditions: HD Video Streaming, S-Band 2.2 GHz Smart Radio, 3.5 dBi antenna



#### Fig. 1 Example applications using the Mesh Rider Radio (UAV)

Fig. 2 Example applications using the Mesh Rider Radio (UGV)

In our experiments, the typical latency due to the radios was around **10ms**. The telemetry link was stable down to the sensitivity level of the radios.



#### Fig. 3 GCS System Setup

Our Reference Design setup is shown in Fig. 3. Communications to the drone is provided by a Doodle Labs Wearable Mesh Rider Radio (RM-915-2K-XW). The UAV includes a Doodle Labs Embedded Mesh Rider Radio (RM-915-2J-XM). The tablet connects to the Wearable Mesh Rider Radio over it's built-in 5-GHz WiFi.

The Wearable Mesh Rider Radio can be mounted on a tripod or even carried in the backpack of the operator without the need for a wired connection to the tablet.

#### **GCS** Components

There are many different GCS software available and this reference design is based on QGroundcontrol (QGC) [1]. In general a GCS requires three different links to the UAV

- A telemetry link the telemetry link carries status information about the drone such as it's altitude, heading, GPS location, battery status and so on. QGC uses the MAVLink protocol for telemetry [2].
- A video link QGC integrates a video monitoring terminal capable of displaying several different IP streaming protocols.
- A control link QGC supports external USB joysticks. These joystick commands are sent over MAVLink.

#### The UAV

In this reference design, we are using Pixhawk 4 Orange Cube [3]. Information on how to hook up a pixhawk 4 with the Embedded Mesh Rider Radio can be found in the application



note, "Integration with Pixhawk and QGC" available in the Doodle Labs Technical Library. The basic components relevant to the Mesh Rider Radio are shown in Fig. 4.

Fig. 4 UAV components connected to the Mesh Rider Radio

## **Software Configuration**

#### Drone-side Mesh Rider Radio

The Mesh Rider Radio starts a UDP server at port 2000 with a baud rate of 57600 by default. Therefore, if the settings are acceptable, then there is no need to configure the Mesh Rider Radio at all. Fig. 3 shows a screenshot of the Serial Port configuration menu which can be accessed by navigating to Services -> Serial Configuration in the web GUI. By default, the Mesh Rider Radio's firewall is open on port 2000, but if the port is changed, then a new firewall option needs to be defined.

DOOD\@ labs	Social Part Configuration (So	
	Serial Port Configuration (So	cal)
Smart Radio MAC #301a4ebb02	General	
Status	Socat enabled	
Network Configuration	Socat role	Uncast server v 0 When role is:
Services		<ul> <li>- Unicast server, it will expose the thy to the clients trying to connect to local port, in unicast mode;</li> <li>- Unicast client, it will try to connect the local try to the host ip and port, in unicast mode;</li> <li>- Multicast sender, it will send via multicast everything which was received at the specified tty;</li> </ul>
Serial Configuration		<ul> <li>Multicast receiver, it will write to the specified tty everything which was received via multicast;</li> <li>Multicast peer, it will expose the specified tty (read and write) to the multicast network.</li> </ul>
Admin	Transport	UDP v
	Port	2000
		0 Please take note that: - A firewall traffic rule might be needed. Please click here to go to firewall traffic rules; - To change this traffic priority over other kind of traffic, please visit Differentiated Services page by clicking here.
Advanced Settings	Re-use address	<ul> <li>Allows other sockets to bind to an address even if parts of it (e.g. the local port) are already in use by socat.</li> </ul>
Logout	Baudrate of tty	57600 🗸
	Device	/dev/uart0
Mesh Rider	$\pmb{\Theta}$ For advanced configuration, please use the CLI.	

Fig. 5 Serial Port Configuration Menu

Aside from the Serial configuration, you should adjust the traffic prioritization settings. Navigate to Network Configuration -> Traffic Prioritization and make sure to use appropriate settings for the Voice Command & Control queue. If you are using the latest Mesh Rider firmware, then click Optimize Video Streaming. The radio will automatically identify high-bandwidth streams and route them to the Video queue. If the RSSI to a particular station is less than the "Video bad link threshold (dBm)", then the radio will drop a percentage of video packets going to that station defined by "Video bad link drop (percentage)".

DOOD\e	Differentiated Services
	General Settings
Smart Radio	Enable Differentiated Services 🛛 🖗
MAC #00301a4ebb02	Optimize Command & Control and Voice for URLLC 🛛 🖾
Status	Optimize Video Streaming
Network Configuration	Video bad link threshold (dBm)
Simple Configuration	
Wireless	
Interfaces	Classification Rules
Traffic Prioritization Advanced Settings	Source host Destination host Protocol Port(s) DSCP Comment Sort
Logout	all v UDP v 2000 v Voice, Command & Control (CS6) v socat raw
Mesh Rider	(Add) Sive #.Acpty (Sive) (Reset

#### Fig. 6 Traffic Prioritization Menu

### GCS-Side Mesh Rider Radio

For the GCS-side Mesh Rider Radio, we will use a Wearable Mesh Rider Radio which includes an integrated WiFi radio. The integrated WiFi radio starts an AP with SSID

"DoodleLabsWiFi" and password "DoodleSmartRadio". As soon as the GCS-Side and Drone-side Mesh Rider Radios are powered, they should connect to one another. You should also configure the Traffic Prioritization settings in the same way that you did on the Drone-side Radio.

### GCS

For this reference design, we will be using QGroundControl. We used a Samsung Galaxy Tab A for this reference design. Before starting QGroundControl, connect to the WiFi AP of the Mesh Rider Radio. You will need to use a static IP address for the GCS in the 10.223.0.0/16 subnet. An example configuration is shown in Fig. 7.

15:38		× 🖘 🗉	100%
<	DoodleLabsWiFi		
	Password DoodleSmartRadio		
	Auto reconnect		
	Advanced	^	
	IP settings Static		
	10.223.0.5		
	Gateway 10.223.0.1		
	Network prefix length 16		
	DNS 1 8.8.8.8		
	DNS 2 8.8.4.4		
	Proxy None		
	Metred network Detect automatically		
	MAC address type Randomised MAC		
	Connect		
	III O <		

Fig. 7 GCS WiFi Configuration

Once you are connected to the Mesh Rider Radio, you should be able to ping any node on the network. Open QGroundControl and navigate to the Application Settings menu. In Fig. 6, we used the RTSP URL of our UAV.

When using Android as a GCS be aware that changing application windows can cause QGroundControl to disconnect.

✓ Back < (	Application Settings							
General Comm Links			Show Tel	lemetry Log Repl	ay Status B	ar		
Offline Maps			Use Verti	ical Instrument P	anel	nottie		
MAVLink			Show additional heading indicators on Compass Lock Compass Nose-Up					
Console								
Help			Guided Command Settings					
			Minimum Altitude 2 m Maximum Altitude 122 m		m			
					m			
			Go To Locatio	on Max Distance	1000	m		
				Video S	ettings		_	
			Source	RTSP Video Str	ream	•		
			RTSP URL	rtsp://doodle:do	oodle@10.2	23.0.2:8554/test	1	
			Aspect Ratio	1.777777				
			File Format	mkv		•	]	
				Disable Wh	en Disarme	d	-	
				Low Latenc	y Mode			
				Auto-Delete	Saved Rec	ordings		
		Plan View						

Fig. 8 QGroundControl Application Settings

Create a new connection to connect to the Socat UDP server on the UAV. The listening port is unimportant.

🖾 Back < (	Application Settings				
General	Edit Link Configuration Settings				
Comm Links	General				
Offline Maps		Name:	UDP.rover		
MAVLink		Туре:	UDP		
Console			y Connect on Start		
Help		High Latency			
	LIDP Link Settings				
		Listening Port:	14550		
		Target Hosts:			
			10.223.187.3:2000		
			Add Remove		
				ок	Cancel

#### Fig. 9 QGroundControl Comm Links

After that, open up the Comm Links tab. At this point, navigate back to the main screen. QGroundControl will connect to the UAV.



Fig. 10 QGroundControl Ready

## **Important Notes**

### **Multiple Radios**

There are three main links between the UAV and the GCS, telemetry, Video, and RC control. The Mesh Rider Radio can be used for all three links, and if necessary, the RC and Telemetry links can go over MAVLink.

Using multiple radios on a radio usually creates RF interference issues. You cannot operate two radios in the same band even if they are on different channels as this will seriously compromise the link performance of both radios. For example, an RC radio link at 2412 MHz cannot be used alongside the Mesh Rider Radio at 2462 MHz.

### Mesh Rider Radio API

The APIs provided by the Mesh Rider Radio are described in the document, "Remote Management Guide for Mesh Rider Radio", which is available in our Technical Library.

### Antennas

The Doodle Labs Mesh Rider Radios provide excellent communications range, however, we do recommend using the highest gain antennas which your application can support. This will provide the best link quality. Consult out guide, "Antenna Recommendations for UAS" in our Technical Library for more information.

## References

- 1. QGroundControl, http://qgroundcontrol.com/, 18-Jan-2022
- 2. MAVLink Developer Guide, https://mavlink.io/en/, 18-Jan-2022
- 3. Pixhawk, https://pixhawk.org/, 18-Jan-2022